

Overview

Supermicro quick-release rails are designed for use in racks with square holes. This instruction set provides directions for the installation of an adapter to modify square hole racks to accommodate round and threaded holes.

Note: For the threaded-hole rack, as long as the thread is M5 or larger, the Supermicro screws and washers can pass through the flange to mount this adapter on the rack to connect to the rail.

Ordering the Adapter Set

To order a Square-to-Round-Hole Rail Adapter, contact your Silicon Mechanics Sales Expert at 866-352-1173.

Installation

Each set includes 2x bracket A and 2x bracket B.

Screw bag is already in the chassis accessory box.

Bracket A will install on both front of left rail and rear of right rail.



Bracket B will install on both front of right rail and rear of left rail.



Adapter Set



Brackets A and B

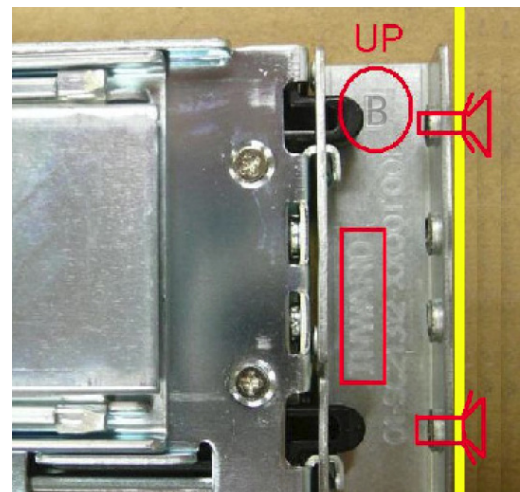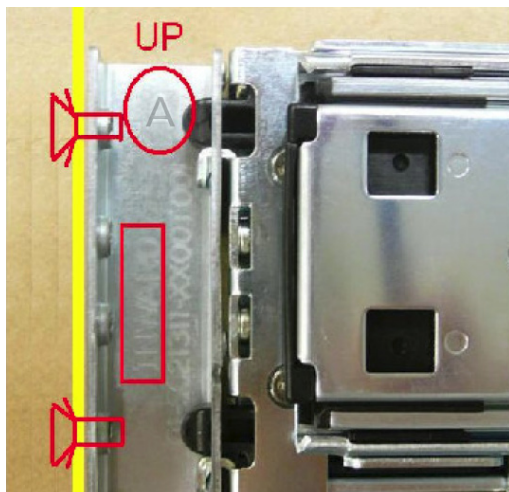

Bracket B Installed Correctly